


PowerHook Rear Target Update Kit

Poweramp PowerHook restraints changed the design of the rear prox switch target beginning 9/1/2009. For units prior to this change, the 7056-0002 update kit must be installed to use a current guide track.


Prox switch mount used before 9/1/2009




Prox switch mount used after 9/1/2009

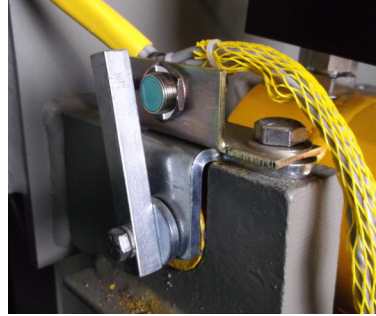


To install the update kit, refer to the following instructions:

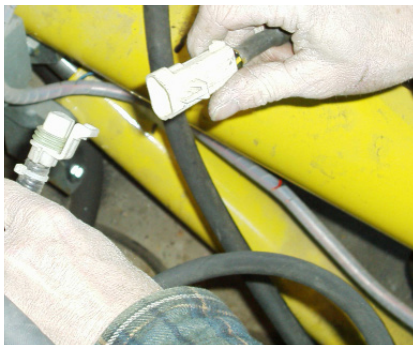


Step 1. Unplug harness & remove guide track.

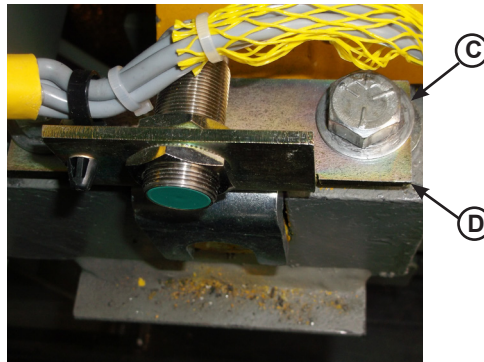

Step 2. Mount the rear prox bracket and new gland keepers (both sides).

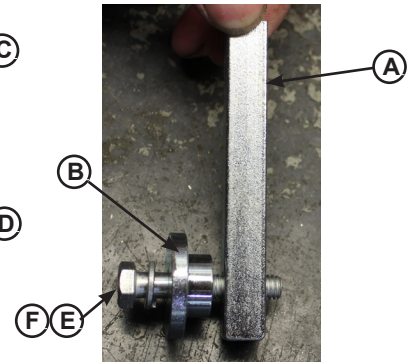

Step 3. Mount the rear prox target using new bolt and washer.

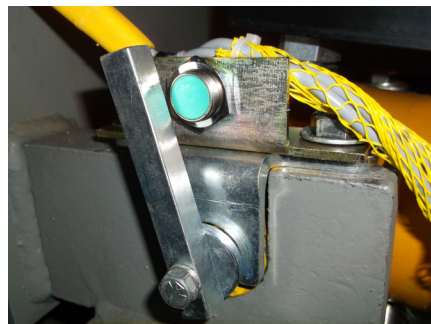

Step 4. Start adjustment at 10 o'clock position. Rotate **clockwise** to raise hook or **counter-clockwise** to lower. When adjustments are complete, top of hook should be 6" to 8" off the apron at full extension. See PowerHook Owner's/User's Manual for more detailed adjustment instructions.